


Mobile phone illustrations and instructions

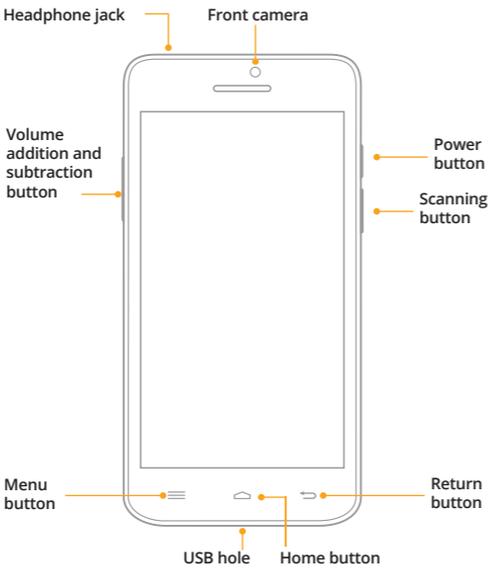

- Power button**  
Press and hold this button to power on/off the phone.
- Volume button**  
Adjust the volume. When pressing this button when there is an incoming call, the ringing will become mute.
- Power button + volume subtraction button**  
After lighting the screen, this action can take a screenshot.
- Scanning button**  
Click to start scanning in the application.

Mobile phone illustrations and instructions



**Notice:**  
Please do not point laser at eyes. Long exposure can cause unrecoverable damage the eyes.


Installation and preparation

Please insert the SIM card and battery before using the phone. Make sure the phone is turned off before the battery or SIM card is removed from the phone.



1. Open the back cover
2. Remove the battery

Installation and preparation

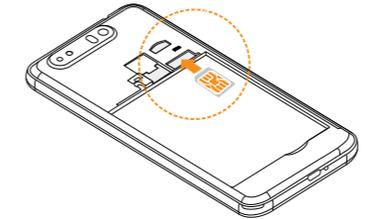

3. Insert SIM card

Please do not use any non-compatible card or non-standard SIM card, otherwise it will damage your phone.



This phone uses a Micro SIM card.

Common question

**Q: How to you extend the standby time of the mobile phone?**

- Answer:
1. If you do not need to use the mobile network to browse the internet or upload and download data, you can turn off the network data connection. Go to settings > wireless and network > more... > mobile network.
  2. If you do not need to use the WLAN or Bluetooth, you can turn off the WLAN or Bluetooth. Change this by going to settings > wireless and network > WLAN or Bluetooth.
  3. If you do not need to use GPS, you can turn off the GPS. Go to settings > information location access > GPS satellite.
  4. Screen brightness and duration of sleep will affect the standby time of the phone. You can adjust these two settings by going to settings > display.
  5. Exit and shut down the applications that are not in use.
  6. Reduce the volume.

**Q: How to free up phone memory?**

- Answer:
1. Move the files and e-mail attachments to the Micro SD card.
  2. Remove all cache pages and browsing history information from the browser.
  3. Uninstall the applications which are no longer necessary.

## Using tips

### Important tips

In order to avoid unnecessary harm, please note the following information when using the phone.

Please do not turn on the phone where wireless devices are forbidden to use, including aircrafts, medical facilities and medical equipment indicating not to use mobile phones.

Please do not turn on the phone where it may cause interference or danger, such as around petrol stations, fuel or chemicals, blasting areas, etc.

Please use the original accessories and battery, do not use incompatible products.

Keep the phone dry.

Please find qualified maintenance staff to repair mobile phones.

Please consult the connection method in the instructions when connecting to other devices. Do not connect to unsuitable devices.

### Battery charging

The battery icon in the upper right corner of the screen shows electricity quantity or charging status, you can also choose to show the percentage of electricity quantity.  
(Trick in the select box in setting > battery > electricity quantity percentage)

Please charge by using the attached charger connected to a power outlet or connecting to a computer with a USB cable.

## Using tips

### Connect the phone to the computer

Connect to the computer with a USB cable, open the data storage through the pop-up window or drop-down notification bar. While using the data storage, a part of the program cannot be used, such as file management, etc.

### Open the back cover

Gently pull the opening in the lower left corner of the N5000 outwards to remove the back cover.

### Insert or remove the battery

Align the battery metal contact entrance with the body battery contactor. Press down to insert the battery. To remove the battery, pull the battery out of the recess at the bottom or the battery compartment.

## Mobile phone configuration

<b>Processor</b>	Dual core 1.2GHZ
<b>Bands support</b>	WCDMA: Band I (2100) Band VIII (900), GSM: 900/1800/1900
<b>Style</b>	Full touch screen, stylish look
<b>LCD</b>	5.0qHD
<b>System memory</b>	4GB (ROM) + 1GB (RAM)
<b>Size</b>	146.7*73*9.3(mm) (length*width*thickness)
<b>Weight (including battery)</b>	155g
<b>Battery capacity</b>	2500mAh
<b>Wireless transmission mode</b>	Bluetooth / WiFi
<b>User memory mode</b>	T-Flash card slot, maximum support 32GB capacity card
<b>Scanning head</b>	Scanning head professional 1D / 2D scanning head

## Mobile phone configuration

<b>Camera</b>	Rear camera: 5 million pixel autofocus camera + double LED flash Front camera + double LED flash
<b>USB type</b>	USB 2.0
<b>Touch screen</b>	Capacitive touch screen
<b>Fast charging</b>	3 hours
<b>Host protection function</b>	After free drops at a height of 80cm for 6 times (one time per side), the device is not damaged.
<b>The CTA certification</b>	Network access license of telecommunications device, Radio transmitting device, Model approval certificate.

## Safety tips

### Declaration of toxic and hazardous substances in electronic information products.

Component	Harmful Substance					
	Lead (Pb)	Mercury (Hg)	Polybrominated Biphenyls (PBB)	Cadmium (CD)	Six valence Chromium (CR (VI))	Polybrominated Diphenyl Ethers (PBDE)
Host	×	○	○	○	○	○
Charge	×	○	○	○	○	○
Battery	×	○	○	○	○	○
Cable	○	○	○	○	○	○

This form is compiled in accordance with the SJ/T 11364.

○ : It represents that the content of this hazardous substance contained in all homogeneous materials for this component is all under the limit requirement in GB/T 26572

×

X : It represents that the content of this hazardous substance contained in all homogeneous materials or at least one component is above the limitation in GB/T 26572, and there is no mature alternatives in the industry, meeting the environmental protection requirements of EU ROHs instructions.



The number in this logo represents that the products have a 20 years environmentally friendly use period under normal conditions. Some other components may also have an environmentally friendly use period logo, their environmentally friendly use period depends on the number in the logo. Because of different models, the product may not include all of the above parts, except for the host, please refer to our actual sales product configurations.



Newland EMEA HQ

Rolweg 25  
4104 AV Culemborg  
The Netherlands  
Phone: +31 (0) 345870033

[www.newland-id.com](http://www.newland-id.com)